



PNEU ZELT CUBE SETUP MANUAL

WIR BLASEN AUF. SIE FALLEN AUF.

www.noproblaim.at



GENERAL SCHEME

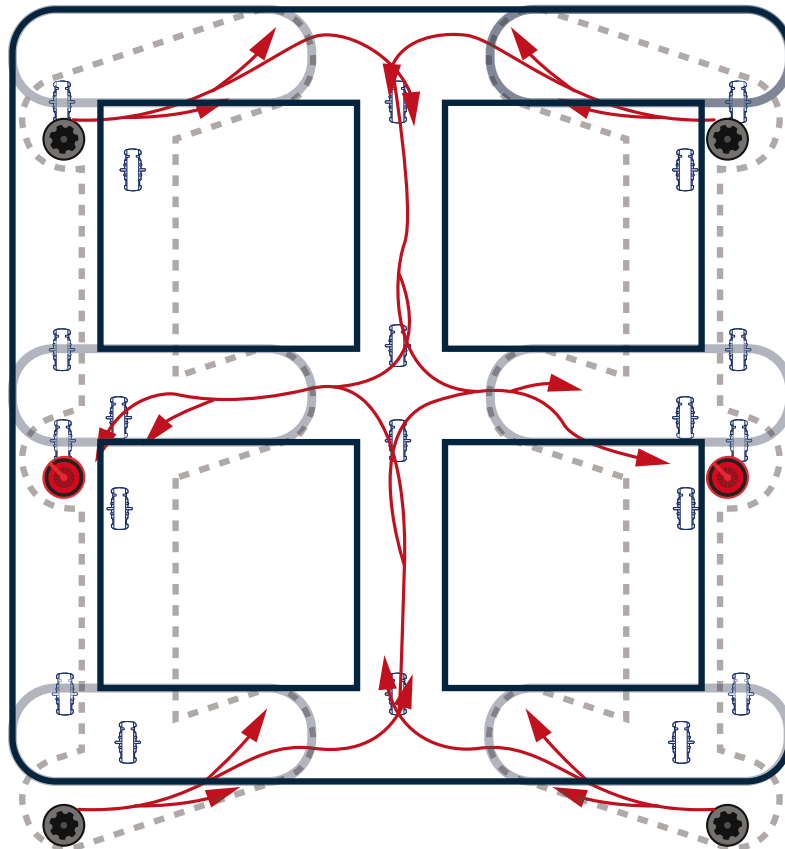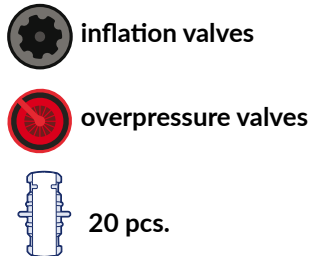


INFLATION

1. Clean an area, where the tent should be placed. Mainly sharp objects and chemicals have to be removed. Use of protection blanket is recommended.

2. Remove tent from the bag, place it to its one of possible positions.



FRONT (recommended position)

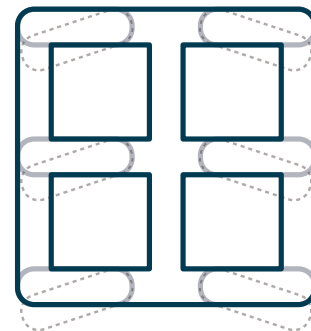

TOP

3. Check position and function of all six valves. Due to an order of central inflation system, all four **black inflation valves (on each corner)**, must be installed on position signed with **black arrow**. A base part of black valve must be properly tightened (check a valve seal before use), small black cap must stay open.

Red overpressure valves must be installed on other two positions (central legs), well tightened to prevent air leak.

In a case tent was not used for longer time period, it is recommended to check functioning of all overpressure valves by pushing the spring with a finger or blowing through the valve. Paralelly, seats of all valves shall be checked to avoid sand



red overpressure valves



black inflatable valves



black arrow position

4. Walls and banners should be installed before inflation of tent.



5. Connect a hose of pump to the one of black valve and start inflation.



6. Tent has erected itself.




7. When tent is erected, **put the legs to the future position.**
If the tent can't erect, help the whole tent to erect and put it to the future position.




8. Continue an inflation within whole structure gets rigid, ideally till the moment when overpressure valves would open automatically. Overpressure valves are calibrated to the maximum allowable pressure, do not overpressure your tent more as necessary.
Do not disable overpressure valves, it may cause a bladder rupture!

9. After releasing an inflation hose, do not forget to close and tight the small cap of each inflation valve.

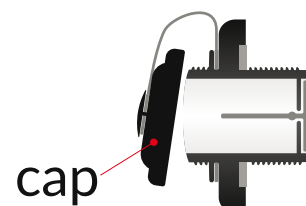

DEFLATION

1. | Open one of inflation valve.
2. | Once tent start to fall down push the center of middle leg inwards.

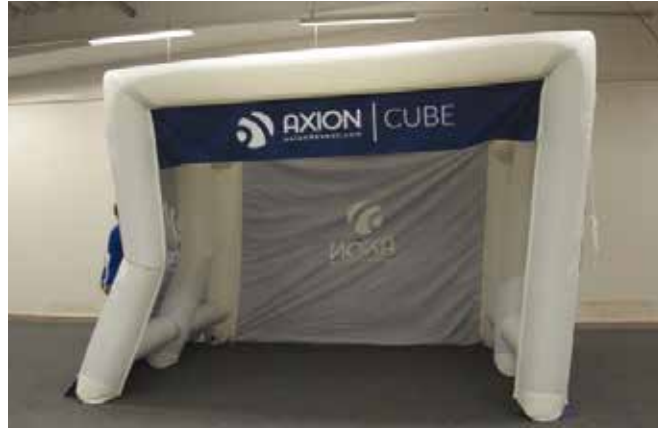

3. | Push to center of middle leg on other side to achieve the same shape as before inflation.



FRONT (recommended position)



4. | Open rest five valves.

5. | Once some air is released and internal pressure in the legs decrease, pull right (or left) half of tent to the transverse one.





5. Rolling the tent. In this way you will release the rest of air out of the structure. Unroll it and roll again to get a compact package, fitting into the trolley bag. A last step before putting the package into the bag is to screw all valves back into their position.





5. Steel spikes must be packed in an extra pouch, which is included in a delivery. Put a pouch into separate pocket in a trolley bag. Put spare parts and a repair kit into another separate pocket in a trolley bag. When all parts including side walls etc are in a trolley bag, zip it on smoothly. If the volume is too big, use support tapes with trident buckles to bring the bag, decrease a volume and help the zipper to prevent its damage.

ANCHORING SCHEME



anchoring in a calm wind

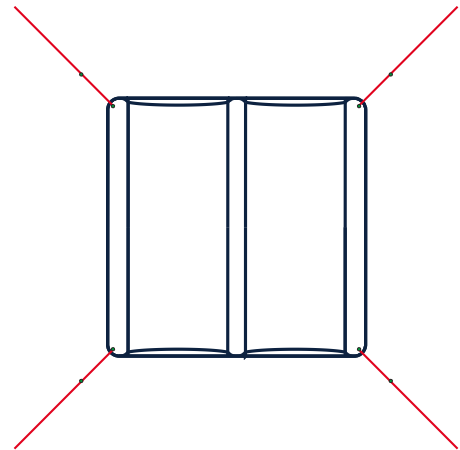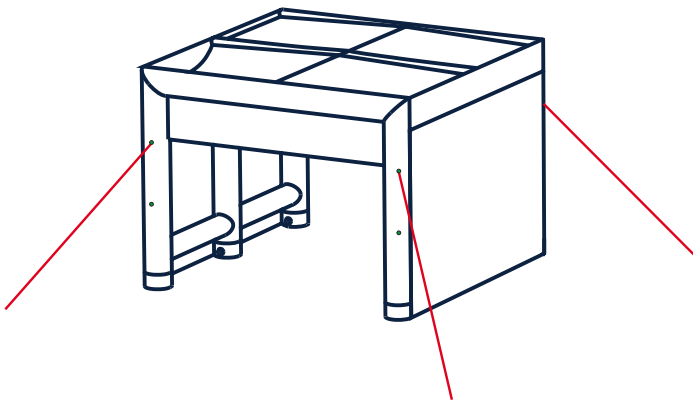


anchoring in a strong wind

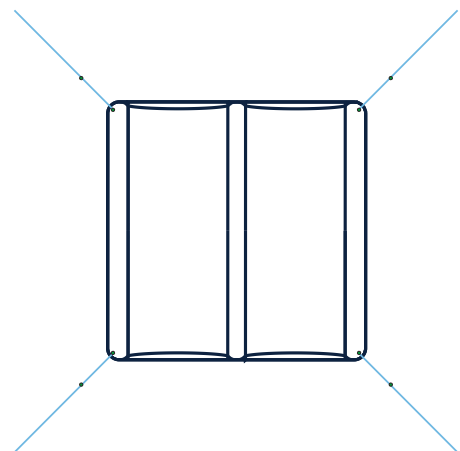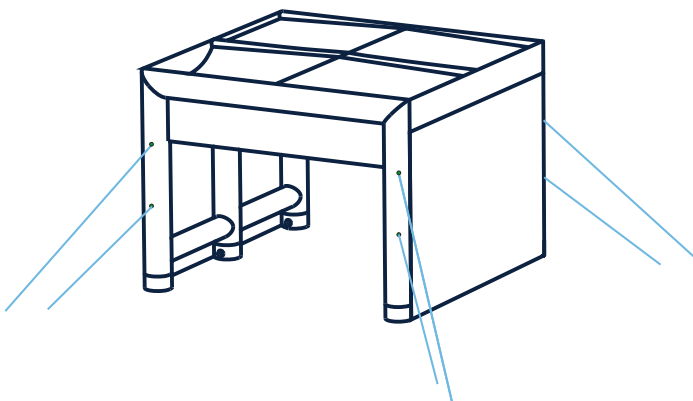


anchoring on hard surface

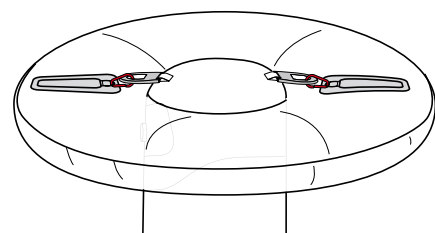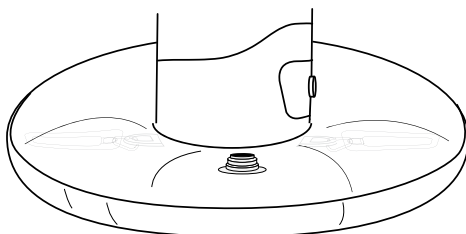

1. Anchor each leg by using four steel spikes (point C) through aluminium buckles in 45° to the ground. Check right position of legs to avoid stress on zippers or weaved side walls. In a case of strong wind it is recommended to anchor wall base with steel spikes through eyelets too.

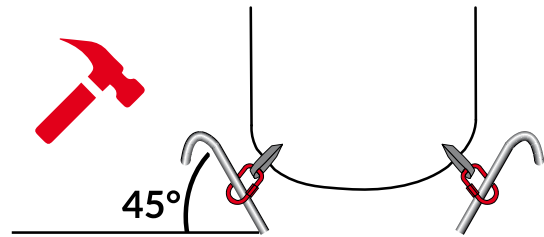

2. There are main ropes attached to points A directly from the factory. Those ropes must be anchored with steel spikes. An optimum angle of spikes to the ground is 45°, an optimum angle of ropes to the tent can see in anchoring schema.

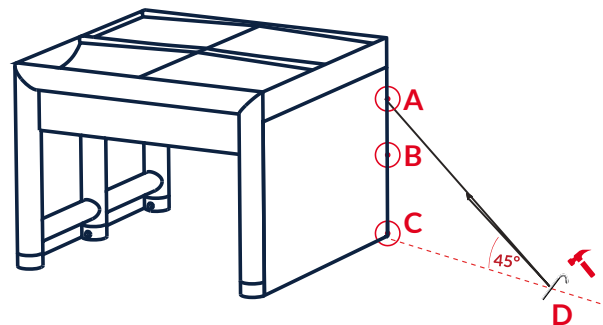

3. Push triangular plastic cleats towards to the roof to tighten all ropes.



4. **ANCHORING TO THE STRONG WIND** : Repeat a procedure of basic anchoring, just add four more ropes to be attached by quick links to points B. Additional ropes are included in a package. Adjust an additional rope length in a way, that it is 5-10cm shorter as a distance between point B and D. Once adjusted, hitch the loop on the spike of point E. As the rope is shorter, it is well tensioned to help a tent to resist a strong wind.

5. **ANCHORING ON HARD SURFACE (TO THE LIGHT WIND / by using ballast bags)** Fill ballast bags with water through dismantled valve. After water filling screw the valve including top cap to avoid water leak. Warning: Ballast bag is designed for pouring water, not to be pressurized with hose! Do not inflate ballast bags with an air pump! When carrying full bags, never throw it to the surface. By ground impact an internal pressure increase, what can lead to the bag rupture. Lay bags to the ground to ideal positions of legs. Side to lay down is a side with hooks. A valve is place on a top side. Hooks must be directed diagonally to the tent, facing to aluminium buckles of tent.

NOTE

1. | Avoid open flame, sharp objects and chemicals.
Clean by water, technical alcohol and detergent (no aggressive) only! Do not use aggressive dissolvent!
Store dry!
Tent is made from 100% polyester and polyurethane bladder.
It can be damaged by rough handling!
2. | Do not overpressure!
By exposing to sun, internal pressure is naturally increasing.
Overpressure is released by RED overpressure valve, there must be placed on right position.
Once the air comes cooler (mainly in the evening), internal pressure goes down.
There can be the necessity to refill missing air.
3. | Use all walls, visors and tunnels after purchase. Residual chemical substances from sublimation process can continue and cause migration of color. These chemicals have to be separated. Risk of further migration of color has been reduced by using or ventilation of walls visors and tunnels.
4. | Always screw all valves back into their position before putting the tent into the bag! Unscrew valves in bag can damage valve bases.



Aufbauvideo Pneu Zelt
<https://www.youtube.com/user/noproblaimvideos>



no probblaim Werbeträger GmbH

Schuster-Straße 4, 2111 Tresdorf / Wien, ÖSTERREICH
Tel +43 (0)2262 64 65 00, Fax +43 (0)2262 64 65 09, info@noproblaim.at, www.noproblaim.at

Alle Angaben ohne Gewähr. Änderungen und Druckfehler vorbehalten. Bezeichnungen/Produkte/Fotos/Skizzen und Texte sind geistiges Eigentum der no probblaim Werbeträger GmbH. Sie dürfen ohne ihr Einverständnis weder vervielfältigt noch reproduziert werden. Es gelten die Allgemeinen Geschäftsbedingungen der no probblaim Werbeträger GmbH in ihrer jeweils letztgültigen Fassung.